

The following supply products are available for the **Craft ROBO**

● **List of Supply Products**

Name	Model No.	Size (inch)	Features and Applications	Contents
Card without Craft Paper Backing	CR09002K	8.5 x 11.0	<ul style="list-style-type: none"> Used to make original greeting cards and business cards. Ideal for paper crafts. 	Matte type: White, 15 sheets
Film Labels	CR09003K	8.5 x 11.0	<ul style="list-style-type: none"> The optimal labels for outputting digital camera and photo data images. Film has water-resistant properties. 	Waterproof glossy film, 5 sheets
Vinyl Sticker A (3-color set)	CR09005K	8.5 x 11.0	<ul style="list-style-type: none"> Used to create decals for affixing to automobiles, motorbikes, windows, etc. The material used for the vinyl stickers and the application sheets is chloride film. 	Black, white, and blue sticker: 1 sheet of each Application sheet: 3 sheets
Magnetic Sheets	CR09008K	8.5 x 11.0	<ul style="list-style-type: none"> Can be affixed to any magnetic surface. 	Matte type: White, 2 sheets
Carrier Sheet	CR09300K	8.5 x 12.7	<ul style="list-style-type: none"> Must be used with materials that do not have a protective liner when they are cut. Also used when cutting materials smaller than A4 size. 	Carrier sheets: 2 sheets
Craft ROBO Blade Holder Set	CR09305K	————	<ul style="list-style-type: none"> Replacement blade holder (with blade) 	Plunger: 1 Blade adjustment cap: 3
Craft ROBO Ball-point pen Holder	CR09306K	————	<ul style="list-style-type: none"> Holder for ball-point pen attachment 	Holder : 1 With a screw
Craft ROBO Cutting Mat	CR09303K	————	<ul style="list-style-type: none"> Replacement cutting mat 	Cutting mat: 1

As we continually strive to improve our products, the contents of this brochure are subject to change without notice.



GRAPHTEC

Craft ROBO

Media Trial Kit

Thank you for purchasing the **Craft ROBO**. To enable you to use the **Craft ROBO** correctly, we have prepared a selection of media for your convenience. We trust that you will enjoy using these products, and that you will continue to use them.

- Please refer to the reverse side of this sheet for a list of the supply products available for the **Craft ROBO**.

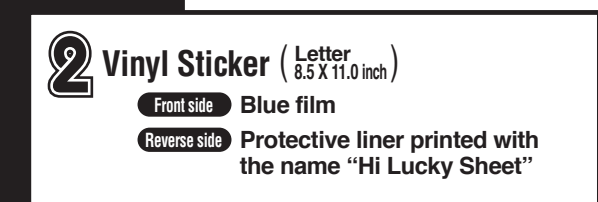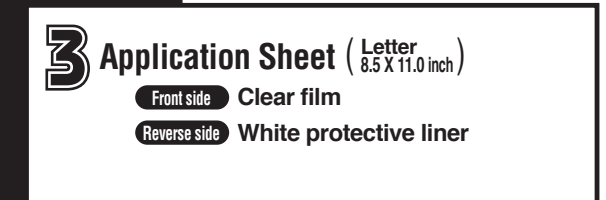

The Four types of media in this package are stacked in the order shown in the illustration.

Media Handling Instructions


Printing Media on a Printer

The media types labeled ① can be printed on an inkjet printer.

Please read the following sections “Printer Driver Settings”, “Printing Procedure” and “Printing Precautions” before performing printing.

Media Types Contained in the Media Trial Kit

Number	Media Name	Size	Overall Thickness (mm)	Printable	Cutting Conditions		Media Front/Reverse	
					Blade adjustment cap	Carrier sheet	Front side	Reverse side
①	Card without Craft Paper Backing	Letter	0.21	Yes	Yellow	Required	White paper (see Fig. 1) (When viewed from the front, the top right corner is cut.)	White paper
②	Vinyl Sticker	Letter	0.275	No	Blue	Not required	Blue film	Protective liner printed with the name “Hi Lucky sheet”
③	Application Sheet	Letter					Clear film	White protective liner
④	Carrier Sheet	8.5 x 12.7 inch					Adhesive protective liner (yellow)	Resin

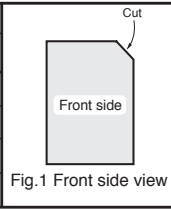

Note 1: Inkjet media and the carrier sheet ④ may curl when used in environments with high temperature or humidity. If the media curls, straighten it out.
Note 2: The Card with Craft Paper Backing is a thick media type, and there may be some printer models that cannot print on it.

1 Printer Driver Settings

Depending on the type of media used, you may need to make certain printer driver settings.

Please refer to the following table and make any settings required for the type of media you are using before performing printing.

- The print modes and media names vary according to the printer used. Please check them in the User’s Manual for your printer.
- The settings in the following table were determined on the basis that genuine inks were used.

Printer Driver Settings

Number	Media Name	Manufacturer					
		EPSON		CANON *1		HP *1	
		Media Setting	Print Quality	Media Setting	Print Quality	Media Setting	Print Quality
① *2	Card without Craft Paper Backing	Superfine Paper	High	High Resolution Paper	High	HP Premium Paper	Best

*1 When using Canon or HP printers, we recommend that you use their photo inks (6-color printing) to enable higher quality resolution.
*2 Pigment inks cannot be used.

2 Printing Procedure

- Read the User’s Manual for your printer before performing printing.
- When loading media to the printer, check that the print side (see Fig. 1) faces upwards and load only the media (together with the protective liner in the case of media types ①).
- Please load the media manually. Refer to the User’s Manual for your printer for media loading and printing instructions.

3 Printing Precautions

- All the media in the Media Trial Kit are for use with inkjet printers only. Do not use them with any other types of printer.
- Do not touch the printed surface until it is completely dry. Moreover, do not stack printed sheets.

Note: Wherever possible, do not touch the printed surface even after it is dry.

Cutting Media on the Craft ROBO

1 Cutting Procedure

- Read the Craft ROBO User’s Manual to confirm how to use the Craft ROBO before performing any actual cutting.
- When loading media in the Craft ROBO, check that the print side (see Fig. 1) faces upwards and load the media (together with the protective liner in the case of media types ② or affixed to the carrier sheet ④ in the case of media type ①).
Please refer to the following “Points to Note” and to the Craft ROBO User’s Manual for details on how to use the carrier sheet ④ when cutting media type ⑤.
Points to Note:
 - After cutting, remove the media slowly and carefully from the carrier sheet ④.
 - The adhesive quality of the carrier sheet ④ will deteriorate after repeated affixing and cutting operations. If this happens, replace it with a new carrier sheet.
- The blade length setting depends on the type of media used. Please refer to the “Media Types Contained in the Media Trial Kit” table and check the color of the blade adjustment cap.

2 Cutting Precautions

- A sharp blade is used in the blade holder. Take care not to cut yourself with the blade.
- Make sure that the ink is completely dry before cutting media that has been printed.

Media Handling Precautions

- Always hold media that shows fingerprints or scratches easily by the edges. Ink may not adhere correctly in places where there are fingerprints.
- Take care not to get the printed media wet. The ink may smear or cause stains.
- The media types ② use a strong adhesive. Do not affix your labels, decals, etc. to any objects where residual adhesive left when they are removed will cause a problem.
- Before affixing your labels, decals, etc., make sure that the target surface has been wiped clean of any water, oil, dirt or dust.
- Do not apply media types ② to uneven surfaces or to matte surfaces. Strong adhesive has been used, but they may still lift off.
- Media easily absorbs moisture, so do not remove any sheets from the package until just before use.
- After the package has been opened, use the media as quickly as possible. Always store the sheets in the package they came in.
- Avoid storing media in high-temperature, high-humidity locations, or in locations exposed to direct sunlight.

*The latest version of “Cutting Master 2 for Craft ROBO” is uploaded at following address of Web.
Please check the version of your “Cutting Master 2 for Craft ROBO” and download the new version if necessary.
<http://www.graph-tec.com/craftrobo/support/index.html>

*The difference of function of “Cutting Master 2 for Craft ROBO” by each model of cutting plotter is described on the Features list at the end part of “Cutting Master 2 for Craft ROBO” users manual.